



微信公众账号 FACEBOOK

安徽长庚光学科技有限公司

www.laowalens.com

服务热线:400-066-1316 Email: sales@laowalens.com 电话Tel:(+86) 551-69107990

地址:安徽省合肥市庐阳区天水路6号

Add: No.6, Tianshui Road, Luyang District, Hefei, Anhui Province

FFII TS 35mm F2.8 C-Dreamer Macro 0.5X 使用手册 Instruction Manual

本公司保留更改产品设计与规格的权利,届时恕不另行通知; 本公司保留对此《使用说明》的最终解释权。

Please note we reserve the right to change our product's design and specifications at any time without notice and to the final interpretation of the *Instruction Manual*.

前言



真诚 地感 谢您选购 FFIITS 35mm F2.8 C-Dreamer Macro 0.5X 说头!为了让您充分理解本产品的使用方法和注意事项,请您在使用前仔细阅读本说明书。



为了操作上的安全,使用本产品前请务必详细阅读使用手册和注意事项,并将手册放在需要时容易取得的地方。如遇到不能解决的问题请拨打售后电话获取技术支持。

主要特点

 该接头是针对全面幅相机设计的标准焦段移微距镜头,具有0.5倍的放大倍率,且无穷远成像, 土12mm移轴量,土10^{*}帧斜量,可覆盖667mm像场直径等特性。镜头采用特殊光学设计,保证 光学蒸烧的同时,更大的拓展了使用场景,增加了专业商业摄影师镜头方面的选择。

移动量±12mm

在拍摄过程中、很多时候由于环境的限制,拍摄机位离被摄物较近,可以借助±12mm的镜头偏移和旋转功能,方便构图和接片,让被摄物不会因为拍摄距离近、俯仰角度大而产生的近大远小的诱刺变化、让拍摄变得更为严谨。

倾斜量土10°
 移轴镜头的倾角功能就是将镜头的一部分倾斜。通过倾斜功能,摄影师可以实现合焦于不平行于图像传感器的平面特殊效果。

镜头结构

此镜头的机械机构全部采用金属部件,确保了镜头的组装精度和耐用性。镜头光学结构12组14 片,采用了1片高折射率镜片和4片ED镜片,保证镜头锐度,又最大限度的降低了色散和畸变,同时 提高了边缘画质。

籍头支架

配备专用移轴支架,移轴支架的主要作用是配合移轴镜头,使摄影师在保持透视不变的情况下移 动相机的位置。这样,摄影师可以充分利用移轴镜头的像场,实现完美接片。

注意事项

△ 安全注意事项


- 切勿自行拆解、修改或改装。当产品由于外力原因破损,切勿触碰外露部分或破损边缘处。
- 切勿放置于直射阳光下、封闭车辆中或其余高温处,否则过高的温度会使镜片和其他部件产生伸缩变形。
- 不使用镜头时,请将镜头前盖盖上或置于没有阳光照射处。凸透镜反射出的光线可能会聚集在附近物体上,导致发生火灾。
- 在逆光拍摄时,切勿将太阳置于画面中心,应该使太阳充分偏离画角,否则阳光会在相机内部聚集并导致火灾或灼伤眼睛。

注意事项

长期使用保养注意事项

- 避免触摸镜头表面,应用专用镜头布或气吹去除镜头表面的尘 埃,不使用镜头时,应将镜头盖盖上。
- 使用镜头纸或镜头布清洁时,以螺旋的方式从中间向外擦拭镜 头上的污垢以及指印。
- 镜头从寒冷的环境突然转移至温暖的环境时,镜头的外部以及 内部镜片将会凝结水雾,所以在转移时应采取防潮保护措施。

各部件名称

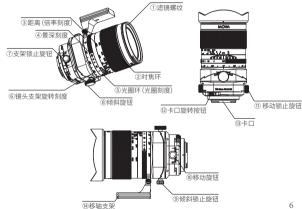

使用说明

■ 镜头安装

取下镜头后盖,將镜头卡口上的安装标记⑬对准相机座圈上的对应标记,随后将镜头插入机身座圈,根据所购买卡口的安装方向旋转镜头,直至咔嚓声锁紧镜头。安装时请不要用力过猛,以免导致卡口损伤。

■ 镜头拆卸

关机后按住相机上的镜头释放按钮,依照所购买卡口的安装方向反向 旋转镜头,随后将镜头从座圈中拔出。 装上镜头后,请尝试旋转镜头确认是否已将其固定在相机上。

■ 対焦

此款镜头是全手动对焦镜头, 合焦时, 缓慢旋转对焦环②, 直至合焦。 不要过猛过快地旋转对焦环, 避免用力过度损坏对焦环部件。 镜头上的距离刻度③与景深刻度④是出于指导目的。实际焦点与最深 可能同刻度标记稍有不同。

■ 使用倾斜功能

- 1, 拧松⑨倾斜锁止旋钮后
- 2,转动®倾斜旋钮进行倾斜量的调整,调整量为±10°

■ 使用移动功能

- 1, 拧松⑪移动锁止旋钮
- 2,转动⑩移轴旋钮来调整移动量
- 3,在达到移轴需求量时,拧紧锁止机构

■ 转动功能

转动功能使您能通过转动移动装置来改变移动的方向。 按住②卡口旋转按钮,可以转动±180°。镜头在每15°位置设置限位。 两处旋转结构,可实现多角度的接片和特殊角度倾斜,满足用户的多种拍摄 需求。

■ 移轴支架使用

拧松⑦支架锁止旋钮,镜头可实现±180°旋转, 镜身上每15°有刻度显示,可根据拍摄需求调整角度, 调整角度后,锁止⑦支架锁止旋钮。

■ 光圏使用

光圈在镜头上调节,根据拍摄环境和与所需要的景深,转动光圈环② 来选择对应的光圈。


由于此镜头无CPU数据,所以暂时无法记录光圈参数。 由于光圈为手动调节,无法较好的使用快门优先模式,但可以使用光圈 优先模式(测光准确度视相机型号而定)。


提醒说明: 镜头在斜45°±12mm极限移轴的情况下, 镜身结构端会与部分手柄 比较宽大的机身进行干涉, 为了避免机身磕碰, 请在使用前进行测试, 或根据实 际拍摄减少移轴量。

规格表

产品规格	
镜头编号	FFII TS 35mm F2.8 C-Dreamer Macro 0.5X
画幅	全画幅
焦点距离	35mm
光圈范围	F2.8-F22
视场角	87.5°
镜头结构	11组14枚(4枚ED,1枚高折射率镜片)
光阑叶片	15片
最近摄影距离(物像距离)	22.8cm
最近工作距离(微距专用)	6.1cm
最大放大倍率	0.5倍
移轴量	±12mm
倾斜角度	±10°
合焦驱动方式	手动 (MF)
滤镜尺寸	Ф77mm
镜头尺寸	ф85*148.9mm
重量	约1350g(不含前后盖)
卡口	GFX/E/RF/Z/L/XCD

Preface

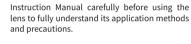

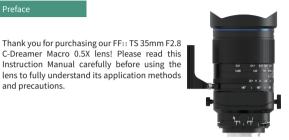

比OWA

For the safety of operation, please read the manual and precautions carefully before using this product, and put the manual in a place where it is easily accessible when needed. If you encounter problems that cannot be solved, please call the after-sales service for technical support.

Features

- I.The lens is a standard focal segment shift macro lens designed for full-frame cameras, with a
 magnification of 0.5%, and infinite imaging, shift amount of ±12m, tilt amount of ±10°, can
 cover op67mm image field diameter and other characteristics. The lens adopts a special optical
 design to ensure the optical quality, while expanding the use of scenarios, increasing the choice
 of lens for professional commercial photographers.
- II.Shift amount of ±12mm In the shooting process, many times the camera position is relatively close to the subject due to environmental limitations.With the help of ±12mm lens offset and rotation function to facilitate composition and splicing, so that the subject will not experience small perspective changes due to close shooting distance and large pitch angle, making the shooting more rigorous.
- III.Tilt amount of ± 10°
 The tilt function of the shift lens is to tilt a part of the lens. With the tilt function, photographers can achieve the special effect of focusing on a plane that is not parallel to the image sensor.
- Nt. Lens structure
 The mechanical mechanism of the lens is all made of metal parts, ensuring the accuracy and durability of the lens assembly. The lens is constructed by 14 optical elements in 12 groups, using 1 high refractive index lens and 4 ED lenses to ensure the lens sharpness, but also to minimize the dispersion and distortion, and improve the edge circum quality.
- V. Lens mount
 It is equipped with a special shift holder. The main function of the shift holder is to cooperate with
 the shift lens, so that the photographer can move the camera position while keeping the
 perspective unchanged. In this way, the photographer can make full use of the image field of the
 shift lens to achieve a perfect connection.

Precautions


■ △ Safety Precautions

- Do not disassembly, modify or refit the lens by yourself. When the product is damaged due to external causes, any exposed part or broken edge must not be touched.
- Do not place the lens in direct sunlight, in closed cars or at other high-temperature places; otherwise, excessively high temperature will cause the expansion/shrinkage deformation of lens elements and other parts.
- When the lens is not in use, please mount the front lens cap, or place the lens
 at the place under no sunlight. The light rays reflected by the convex lens
 may be concentrated on nearby objects, and thus cause a fire.
- For backlight photographing, keep the sun well out of the viewing frame;
 otherwise, sunlight focused into the camera will cause a fire, or scorch eyes.

Precautions for long-term use and maintenance

- Do not touch the lens surface. Use special lens cloth, or blow air, to remove the dust from the lens surface. When the lens is not in use. mount the lens cap.
- When lens cleaning paper or lens cloth is used for cleaning, the dirt and fingerprints on the lens shall be wiped off in a spiral pattern, starting from the center of the lens and moving to the rim.
- When the lens is transferred suddenly from cold environment to warm environment, water fog will be caused on both the external and internal elements of the lens. For this reason, protective measures against moisture shall be taken during the transferring.

Nomenclature

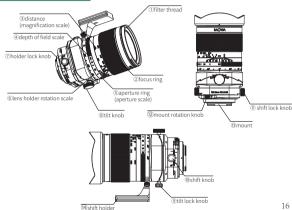

Instruction

Mounting lens

Take off the rear lens cap. Align the mounting mark $(\ensuremath{\overline{3}})$ on the lens mount with the corresponding mark on the camera mount ring; then, insert the lens to the mount ring, rotate the lens in the mounting direction of the purchased mount, and stop rotating until a click sound is heard (meaning the lens is locked). Please do not apply excess force for mounting; otherwise, the mount may be damaged.

Detaching lens

Power off the camera; then, press and hold the lens release button, rotate the lens in a direction opposite to the mounting direction of the purchased mount, and draw out the lens from the mount ring. After lens mounting, please try to rotate the lens to ensure it is fixed on the camera.

Focusing

It is the manual focus lens. Rotate the focus ring (2) slowly until the image is in focus.

Do not rotate the focus ring too forcefully or too quickly to avoid damaging the focusing ring components with excessive force.

The distance scale (③) and depth-of-field scale (④) on the lens are provided for instruction. The actual focal point and depth of field may be different from these marked scales.

Utilizing tilt function

1.Loosen the (9) tilt lock knob.

2.Rotate(§) tilt knob to adjust the tilt amount, the adjustment amount is $\pm 10^\circ$.

Utilizing shift function

- 1. Loosen the (11) shift lock knob.
- 2. Rotate the (10) shift knob to adjust the shift amount.
- 3. When the required shift amount is obtained, tighten the lock knob.

Rotation function

The rotation function enables you to change the shift direction by rotating the shift mechanism.

Hold down the (@)mount rotation knob to rotate $\pm 180^{\circ}$. A limiting position is provided at every 15° of the lens.

Two rotation structures enable multi-angle stitching and special-angle tilting, meeting users' diverse shooting needs.

Usage of shift holder

Loosen the $(\ensuremath{\overline{\mathcal{D}}})$ holder lock knob, and the lens can rotate \pm 180°.

The lens has a scale display every 15 degrees, and the angle can be adjusted according to the shooting needs.

After adjusting the angle, lock the (⑦) holder lock knob.

Usage of aperture

Adjust the aperture on the lens, and choose the corresponding aperture by rotating the aperture ring (②) according to the shooting environment and the required depth of field.

As no CPU data of the lens are available, its aperture parameters cannot be recorded temporarily.

Though the shutter-priority mode cannot be used well due to manual aperture adjustment, but the aperture-priority mode can be used (the metering accuracy depends on the camera model).

ATTENTION: When the lens is tilted at a 45° angle with a maximum shift of ± 12 mm, the structural end of the lens may interfere with certain camera bodies that have wider grips. To avoid damaging the camera body, please conduct a test before use or reduce the shift amount based on actual shooting conditions.

Specifications

Specifications	
Name	FFII TS 35mm F2.8 C-Dreamer Macro 0.5X
Format	Full Frame
Focal Length	35mm
Aperture Range	F2.8-F22
Angle of View	87.5°
Lens Structure	14 elements in 12 groups (4 ED lens and 1 high index lens)
Aperture Blades	15
Min. focusing Distance	22.8cm
Min. Working Distance	6.1cm
Max. Magnification	0.5X
Shift amount	±12mm
Angle of Tilt	±10°
Focus Type	MF
Filter Thread	Ф77mm
Dimensions	ф85*148.9mm
Weight	~1350g (without front and rear caps)
Mounts	GFX/E/RF/Z/L/XCD

